

Measuring for and fitting cornice.


Options

Cornice is the decorative trim typically fixed to the underside of cupboards, though it can be fitted to the top as well. It can also be used to attach or mask lighting. The only option for cornice is having either or both ends folded. This is purely an aesthetic choice and will not affect the functionality of your cornice in any way, however you will need to ensure that any visible ends have a fold so that the mdf backing is not seen.


Measuring

You will always need to take your measurements from the underside / top of your cupboards, ensuring you do not include the door. You will only need to make considerations in length where two pieces meet in a corner. There are two types of corner – internal and external, for examples of both, see below. All our cornice is supplied at a finished thickness of 20mm.

For an internal corner, one length should be ordered PLUS the thickness of the cornice.
(See diagram opposite.)

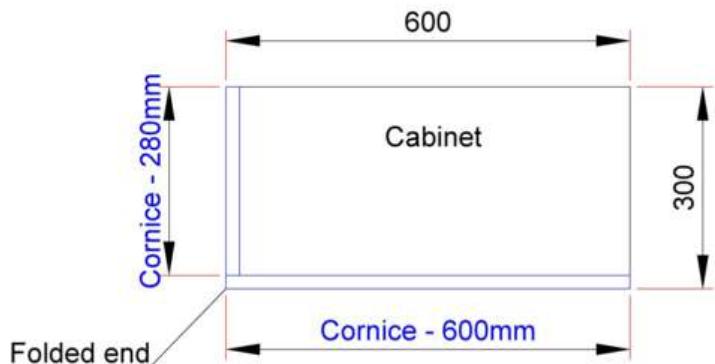

For an external corner, one length should be ordered LESS the thickness of cornice.
(See diagram opposite) Please note, the 620mm length shown should be ordered the left end folded.

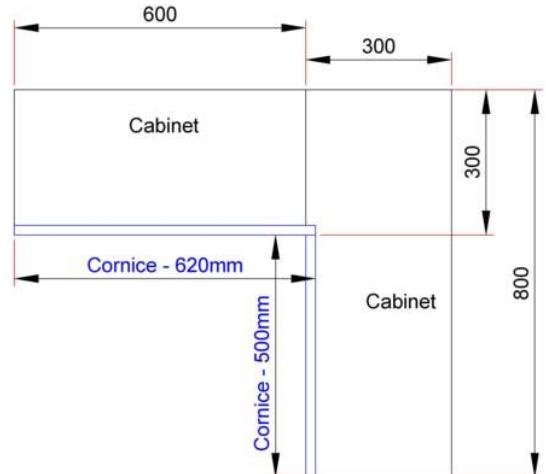

Measuring continued.


These rules can be combined, as shown below. When working as shown, always work from left to right to avoid confusion.

A – This should be ordered at the length of the cupboard it runs along less 20mm.

B – This should be ordered at the length of the cupboard it runs along plus 20mm. It should have a folded left end.

C – This should be ordered at the length of the cupboard it runs along. It should have a folded right end.

D – This should be ordered at the length of the cupboard it runs along, less 20mm.

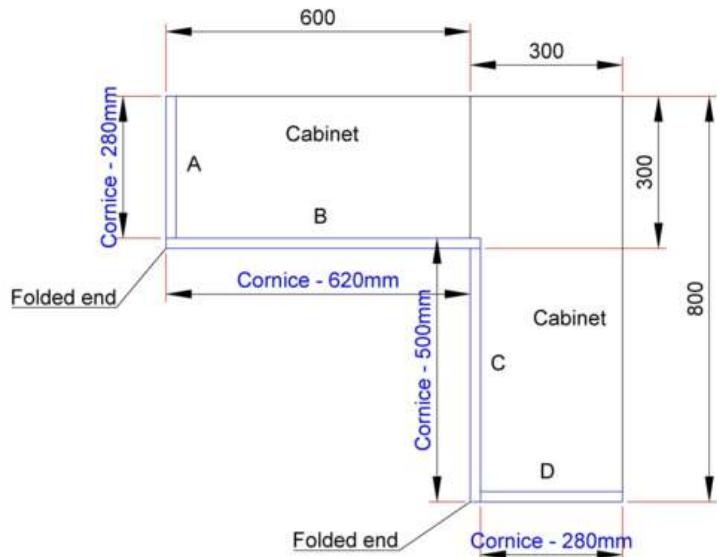

You do not have to have your cornice running from corner to corner of your cupboards. You could have them set back from the front of your cupboards by 15mm, for example so, in the example above you should deduct an additional 15mm from lengths **A** and **D** and add an additional 15mm to lengths **B** and **C**.

Fitting

To fit, we supply our cornice with plastic screw-mounting blocks and fixing screws. We recommend fixing one block to each end of the corners, with the two screw in each, then with one per block to the underside/top of your cupboard, as shown in the diagram below.

