


Measuring for and fitting a splashback.

Options

Splashback are typically a single large piece which is fitted behind either a sink or cooker/hob to catch any food/water residue that 'splashes backwards' and would otherwise mark the wall. There are two main options available for our splashbacks, thickness and direction of the brushing. Both of these are purely aesthetic choices and will not affect the functionality of the splashback in any way.

Measuring

The only thing you should consider when measuring for a splashback is whether any dimensions are enclosed. For example, a single splashback to fit behind a range cooker can be simply ordered at the required size as there will be nothing butting up to it that needs taking into consideration. When the splashback is enclosed on one or more sides, we would recommend measuring the exact gap and allowing 1mm per enclosed side. This size gap can easily be sealed neatly using our CT1 sealant.

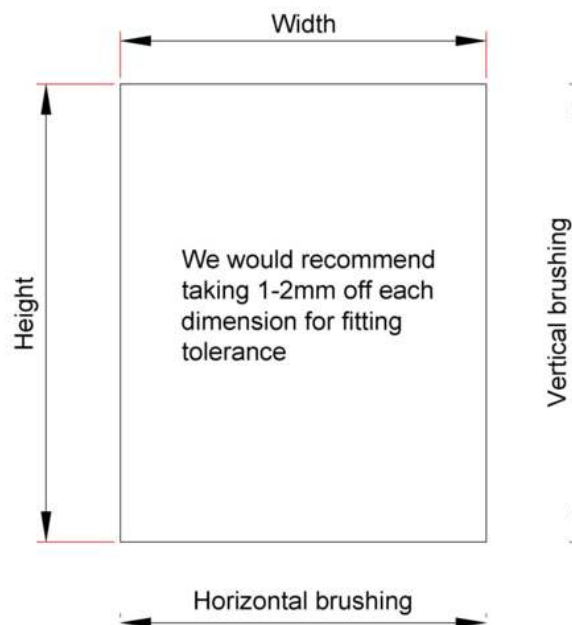

Fitting

To fit, simply adhere to the wall, either using a silicon adhesive or a grip-type adhesive like No-nails, available through most DIY stores. Run several generous lines along the reverse of the splashback and apply to the wall. If the splashback does require any sealing around the edges, we recommend using our high quality CT1 sealant. This needs to be applied sparingly to the joint and any excess cleaned off the surface of the splashback immediately using white spirit and a soft cloth.